


# SmartCell

## Sounder and Wall Beacon Installation Guide

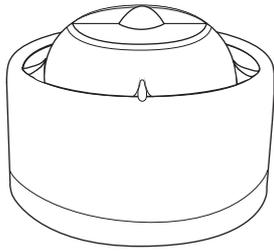

### Part number

SC-32-0110-0001-99

### Product description

SmartCell RED Sounder and Wall Beacon (VAD RED Flash)

SC-32-0120-0001-99

SmartCell RED Sounder and Wall Beacon (VAD WHITE Flash)

SC-32-0210-0001-99

SmartCell WHITE Sounder and Wall Beacon (VAD RED Flash)

SC-32-0220-0001-99

SmartCell WHITE Sounder and Wall Beacon (VAD WHITE Flash)

## 1 Pre installation



Installation must conform to applicable local installation codes and should only be installed by a fully trained competent person.



The use of a non-metallic spacer should be considered if mounting the device on to a metal surface.



This device contains electronics that may be susceptible to damage from Electrostatic Discharge (ESD). Take appropriate precautions when handling electronic boards.




This device is suitable for wall mounting only. Ceiling mounted variants are also available.



To ensure correct operation, products must be used within the specified environmental operating conditions.

## 2 Components

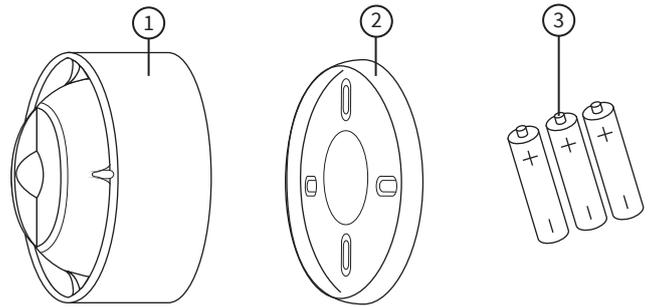


① Sounder and wall beacon    ② Mounting plate

③ Batteries (*not included in some regions\**)

\*When batteries are not supplied, only fit specified batteries.


## 3 Remove mounting plate

- Remove the mounting plate by turning the device **ANTICLOCKWISE**, to release it from the mounting plate.

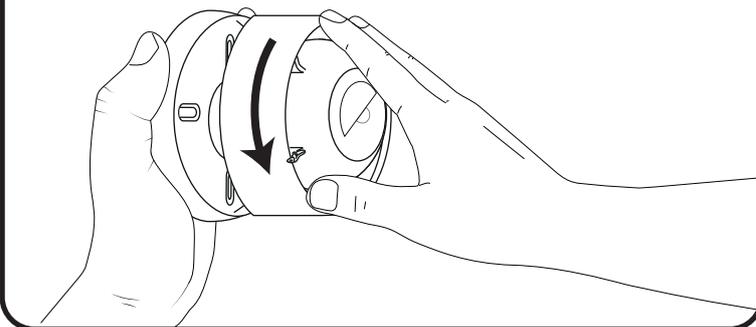

## 4 Fix mounting plate


- When fixing to the wall, all four fixing positions should be used to ensure a firm fixing.
- Where existing electrical mounting boxes are present, two fixing positions may be used.
- Use suitable fasteners and fixings.
- Observe the orientation marking!

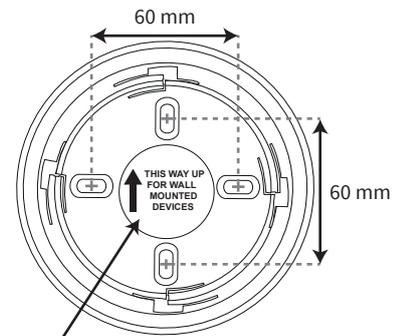

Orientation marking

## 5 Fit batteries

- When fitting / replacing batteries, observe correct polarity, using only specified batteries.

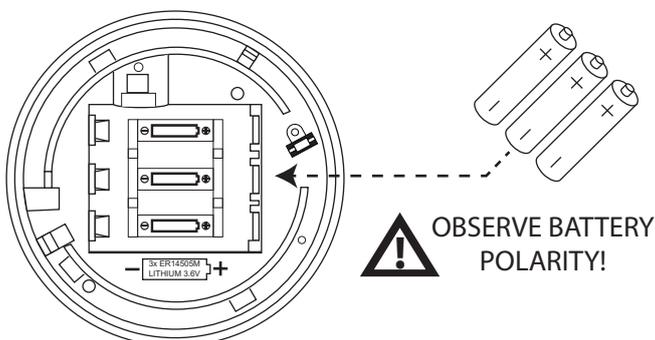

**OBSERVE BATTERY POLARITY!**

## 6 Configuration

The device must now be added (programmed) to the control panel.

**Method 1**  
Device powering




Refer to the programming manual for full programming details.

**Method 2**  
Magnet application




**Method 3**  
Via computer

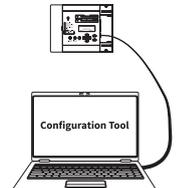

SmartCell panel = TSD155  
SmartCell WZM = MK067


## 7 Optional device locking

- The device includes an optional locking mechanism.
- Remove the thin section of plastic shown below.
- Once locked, the Allen key will be required to unlock the device.

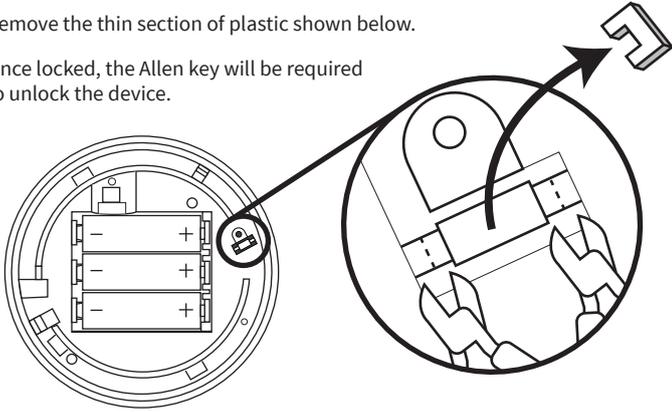

## Device unlocking

- If the device has been locked, an Allen key will be required for unlocking.
- Depress the locking mechanism, by inserting the Allen key, or similar, into the device's cavity and pushing (A).
- Simultaneously twist the device anti-clockwise to release (B).

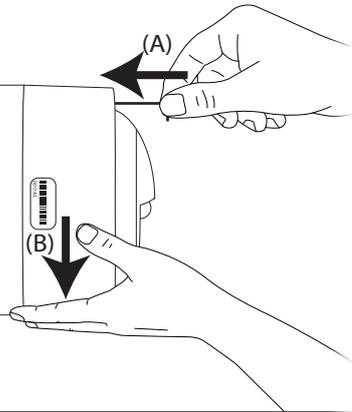


## Specification

Operating temperature	-10 to +55 °C
Storage temperature	
With batteries	-10 to +30 °C
Without batteries	-10 to +55 °C
Humidity	0 to 95% noncondensing
Location	Type B: for indoor/outdoor use
IP rating	IP33
Supply	3 x ER14505M 3.6 V lithium thionyl chloride batteries (Fanso or Titus)
CAUTION!	
■ This is a life safety product. Only use manufacturer approved battery types. Failure to do so may result in damage to the product.	
■ DO NOT mix batteries of different type or age.	
■ When replacing batteries; remove all old batteries before fitting replacements.	
Operating voltage	2.7 to 3.65 VDC $\approx$
Current consumption	0.32 A max.
Power consumption	0.8 W max.
Operating frequency	868 MHz
Output transmitter power	14 dBm / 25 mW
Signalling protocol	X5
Beacon flash rate	0.5 Hz (1 flash, every 2 seconds)
Beacon coverage	W-2.4-6 (WHITE flash) / W-3-5.11 (RED flash)
Sounder output	95 dB(A) at 1m max.
<i>For full sounder output information, refer to the Sounder Data doc (MK103).</i>	
Dimensions (Ø x D)	110 x 77 mm

## 8 Completing the installation

- Reassemble the device as shown below.

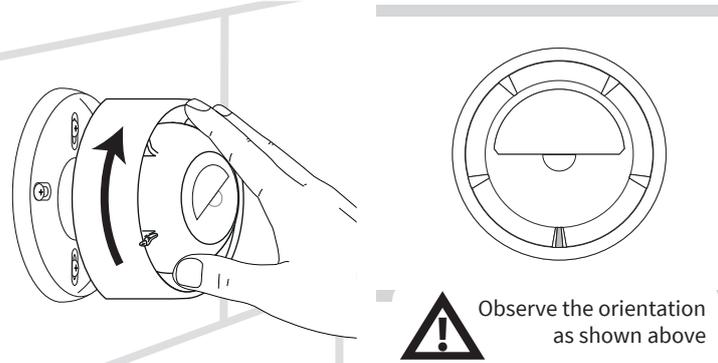

## IMPORTANT

- The device should be tested upon installation, in accordance with local requirements.
- Testing should only be carried out by a fully trained competent person.

## Regulatory information

Manufacturer	Carrier Manufacturing Polska Sp. Z o.o. Ul. Kolejowa 24. 39-100 Ropczyce, Poland
Year of manufacture	See devices serial number label
Certification	<b>CE 19</b>
Certification body	<b>0905</b>
CPR DoP	0359-CPR-00428
Approved to	EN54-3:2001. Incorporating amendments nos. 1 and 2. Fire detection and fire alarm systems. Part 3: fire alarm devices - sounders.  EN54-13:2005. Fire detection and fire alarm systems. Part 13: compatibility assessment of system components.  EN54-23:2010. Fire detection and fire alarm systems. Part 23: fire alarm devices. Visual alarm devices.  EN54-25:2008. Incorporating corrigenda september 2010 and march 2012. Fire detection and fire alarm systems. Part 25: components using radio links.
European Union directives	EMS declares that the radio equipment type SmartCell Sounder & Wall Beacon is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <a href="http://www.mysmartcell.com">www.mysmartcell.com</a>
	2012/19/EC (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see <a href="http://www.recyclethis.info">www.recyclethis.info</a> Dispose of your batteries in an environmentally friendly manner according to your local regulations.